DISHTV

QUICK-START GUIDE

Start enjoying your NEW TV, using this simple guide. 65" (165.1cm) UHD LED TV Model Number: 55UHD

PARTS LIST

In the box you will find:

- 1 x 65" (165.1cm) UHD LED Television
- 1 x Remote Control
- 2 x Base Stand
- 2 x AAA Batteries
- 1 x Instruction Manual
- 4 x 26mm Screws for Base Stands
- 4 x M6 Screws for Wall Mounting

WHAT YOU WILL NEED

Screwdriver, to attach Base Stand (Not Included) Antenna Cable (Not Included)








CONNECTIONS

- 1. Power Cable 2. OPTICAL Output
- 3. L/R Audio Output
- 4. AV Video Input 5. L/R Audio Input
- 6. HDMI1 Input
- 7. HDMI2 Input 8. HDMI3 Input
- 9. Headphone Connection
- 10. USB Port 11. RF (UHF Antenna) Input

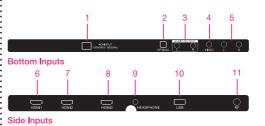

CONNECT TO POWER

- 1. Install the Base Stand (See Page 6 in the Instruction Manual).
- 2. Connect the Antenna Cable to the RF Socket in the TV (To be connected to UHF Aerial for Channel Tuning).
- 3. Connect the TV Power Cable to the Mains Power Socket.
- 4. Insert Batteries into the Remote Control.
- 5. Press the POWER/ STANDBY Button on the Remote Control to turn the power on. The standby light will turn off and the TV screen will display the Initial Setup.



EASY SETUP SCREEN

The on-screen display gives you easy instructions for setting up the TV. Please refer to the Instruction Manual for detailed information.

Use the Navigation Buttons to select the Language, then press the OK Button to confirm your selection. Use the Navigation Buttons to select your Country -New Zealand, then press the OK Button to confirm. The TV will automatically enter Channel Tuning and start tuning available channels in your area.



Country				
Norway				New Zealand
				China
		-		
		⊙ ок		

