



**Dish TV Technologies Ltd**

New Zealand's Leading Supplier of Freeview|HD and Satellite Products

## How to update your satbox S7070r Firmware

1. Copy the .usb image onto your USB memory device in to a folder named "DISHTV".

Note: if you extract the .zip file from our website directly onto your USB memory device the folder structure will be created automatically. You will need to check that the DishTV folder is at the top level of the drive and not inside another folder.

2. Power OFF the Receiver
3. Insert the USB memory device in the receiver USB port.
4. Power ON the box and repeatedly press and release the MENU button on the remote to invoke the boot loader for downloading the S/W image via USB.
5. The S7070r will display "USB" on the front panel and start to load the new firmware. This process will take approximately 3 minutes to complete.
6. The boot loader will attempt to detect the USB memory device.

If the USB device is not present the boot loader will boot up the previous application.

The receiver will automatically start the update process

7. Once the update process is complete the unit will reboot.