

## How to change the LNB setting on the DishTV S6800+

With your TV on and a Freeview channel selected (for example TVOne), press Menu on the remote control.



Now scroll down using the down button, then choose Installation with the OK button, then do the same to choose Program Satellites.



You should now be in a menu that shows the satellite Optus D1 and the LNB settings. Scroll down to LNB Freq1 using the down button. Then use the left and right buttons to change the LNB frequency to the correct one.



Now scroll down to LNB Freq2 using the down button. Then use the left and right buttons to change the LNB frequency.

If you did not climb up to the dish and read the LNB label, but have instead chosen to try it blind, just try a new LNB frequency. If it was 11300, try 10750 and vice versa.

When you have the correct frequency for your LNB you should see the Signal level and Quality level (on the bar graph at the bottom of the menu) come up to around 80%.

Once this is all done just press Exit to leave the menu.