



## DishTV S6800+ User Guide Organising Channels

[www.dishtvsupport.co.nz](http://www.dishtvsupport.co.nz)

Follow these steps to organise your channels

1. Press the MENU button on your remote control. Select Edit Channels and press OK
2. From the Edit Channels menu select Edit TV Channels and Press OK
3. From the channel listing select the first channel you want to move. The up and down arrows will move you one channel at a time. The left and right arrows will move you a screen at a time.
4. Press the Audio button (AUD on the remote) and the channel will be marked.
5. Use the up and down arrows to select the location where you want to move the marked channel to.
6. Press the OK button and the channel will be moved.
7. Repeat until you have all the channels you want moved in the correct location.
8. Press the Menu button to exit out and the changes you have made will be saved.

More helpful information can be found on our website [www.dishtvsupport.co.nz](http://www.dishtvsupport.co.nz)