

## DishTV S6800plus Widescreen Help File

Many New Zealand homes still do not have a widescreen TV. Yet TV3 and C4 are currently broadcasting in widescreen, and TVNZ is soon to follow. This can result in a 'letter box' look on your TV screen.

This problem is especially evident when the broadcaster stops broadcasting a wide screen program and begins broadcasting an older program only available in standard size.

DishTV receivers can solve this problem with the simple push of a button. DishTV receivers have special software loaded onto them called 'centre extraction'. This software, when activated by pressing one button on the remote control, will tell the DishTV receiver that you wish to only watch the 'centre' of the widescreen. Realising this your DishTV receiver will 'extract' that portion of the screen and use it to fill your whole TV screen.

When the broadcaster plays an older program without widescreen, just press the 'centre extract' button again to tell your DishTV receiver.

Which button is it? See the picture for details.

[http://www.dishtvsupport.co.nz/help\\_widescreen.htm](http://www.dishtvsupport.co.nz/help_widescreen.htm)

